


```
zb-c3945-11.254(config)#interface [ ] inside [ ] GigabitEthernet0/0]
zb-c3945-11.254(config-if)#no ip nat inside
zb-c3945-11.254(config-if)#exit
zb-c3945-11.254(config)#interface Dialer1
zb-c3945-11.254(config-if)#no ip nat outside
zb-c3945-11.254(config-if)#exit
...
```

```
2. ** [ ] NAT [ ]
...
zb-c3945-11.254(config)#do clear ip nat translation *
...
```

```
3. ** [ ] NAT [ ]
...
zb-c3945-11.254(config)#no ip nat inside source static udp 192.168.4.6 500 interface Dialer1
500
...
```

```
4. ** [ ] NAT [ ] ** [ ] NAT [ ]
...
zb-c3945-11.254(config)#interface [ ] inside [ ] ]
zb-c3945-11.254(config-if)#ip nat inside
zb-c3945-11.254(config-if)#exit
zb-c3945-11.254(config)#interface Dialer1
zb-c3945-11.254(config-if)#ip nat outside
zb-c3945-11.254(config-if)#end
...
```

[] []

```
* ** [ ] ** [ ] NAT [ ] NAT [ ]
* ** [ ] ** [ ] `show ip nat translations` [ ] NAT [ ]
```

[]